



Cisco Webex Room Series Touch10 Quick Reference Guide

Place Call From Contact List


- 1 Tap the green **Call** button.

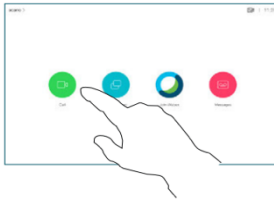


- 2 To search for someone in a specific list (Favorites, Directory or Recents), tap that list and then scroll down to locate the entry to be called.

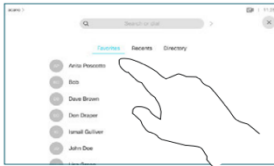


- 3 Tap that entry to produce the green **Call** button. Then tap the green **Call** button, as shown.

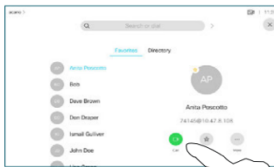

- 4 The call will now be placed.
To end the call, tap the red **End Call** icon.

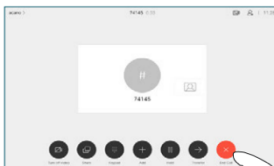


View Keypad While in a Call

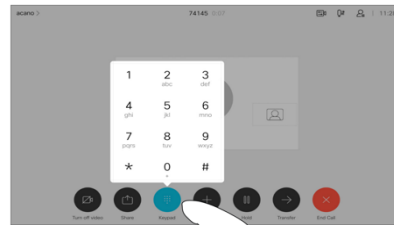

In a call, tap **Keypad** to invoke the dial pad.

Share Content Outside Calls

To share content outside calls, connect the source, make sure it is switched on and tap **Share**. You will then be offered to share content.

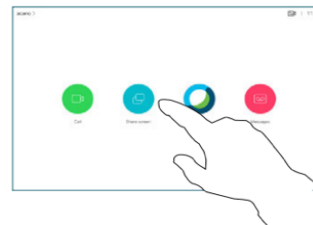


Share Content in a Call

- 1 Connect the source to the video system with a suitable cable, make sure it has been switched on and tap **Share**.



- 2 Tap **Local preview** to view the content without sharing it. Tap the X in the upper right corner, to return to the previous display.

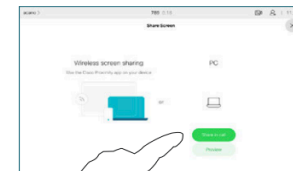


- 3 To discontinue the preview, tap **Stop preview**.




To share content with the remote participants, tap **Share in call**.

- 4 To stop sharing content, tap **Stop Sharing**, as shown.

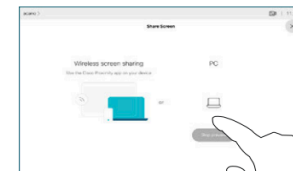

Change Presentation Layout In a Call

1

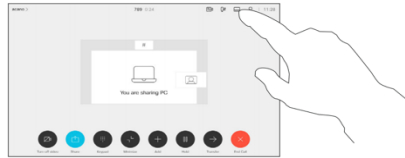

Tap the **Layout** icon, as shown.

2




Tap the layout you want to use. Tap anywhere outside the filmstrip when you're done.

Camera


View Camera Settings

1

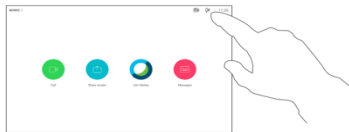

Tap **Camera** to invoke the camera adjustment menu.

2

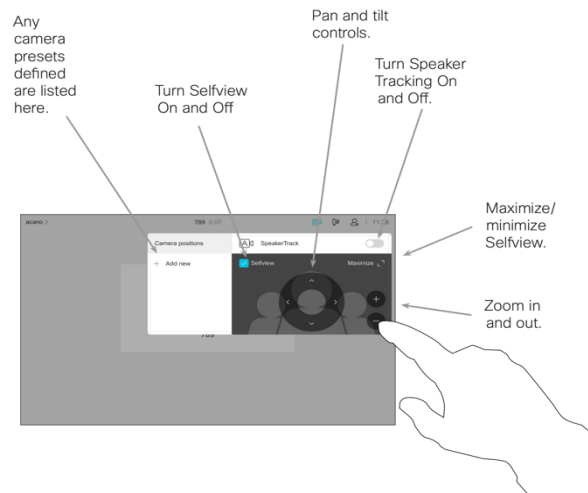


Camera Speaker Tracking

1




To enable Speaker Tracking, tap **Camera**, in the upper right corner.

2

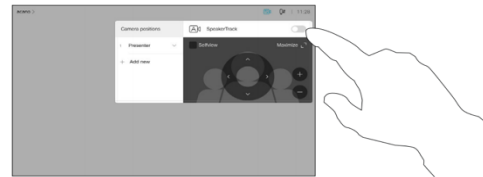

Activate the Speaker Tracking feature by tapping the button in the upper right corner.

3

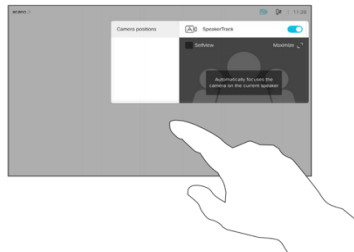

Tap anywhere outside the menu to exit.
To deactivate Speaker Tracking, repeat the procedure.